


Feather Edge Skirting

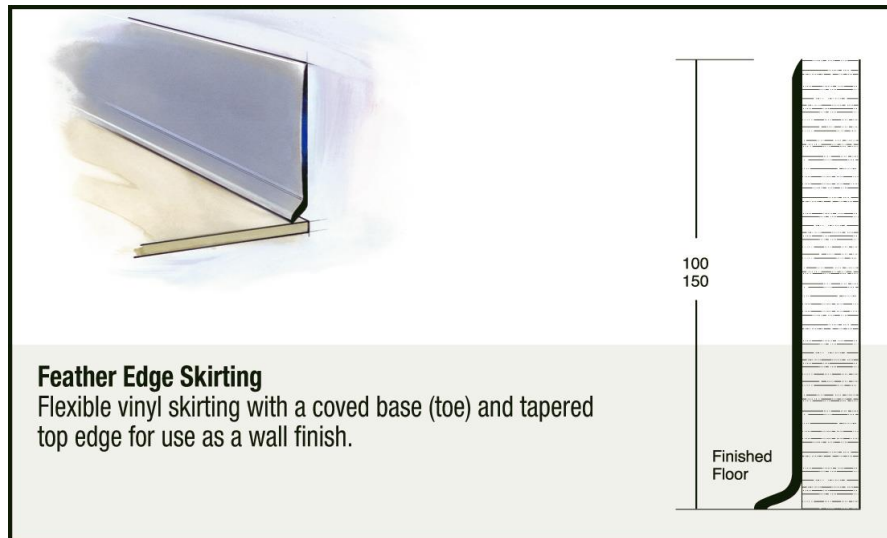

Dimensions in millimeters and are nominal

Product Attributes

Armstrong Flooring accessories are manufactured under strict quality control from a blend of quality raw materials and are designed to colour co-ordinate with Armstrong Flooring resilient ranges and current interior design trends.

Armstrong Flooring - Feather Edge Skirting

A flexible vinyl skirting with a coved base (toe) and tapered top edge for use with smooth flooring finishes to provide an attractive cost-effective solution for the protection of wall bases.

Feather Edge Skirting

- Stocked in 8 standard colour ways*
- Available in
 - 100mm x 15 metre coils
 - 150mm x 15 metre coils

*Custom colours are available on request (*MOQ = 5 cartons, 15% surcharge applies), contact your Armstrong Flooring Representative or Customer Services for further information.

Specification

Where noted in the specification and/or schedule of finishes install Armstrong Flooring - Feather Edge Skirting **100mm** or **150mm**. (Colour and size as specified).

When installing to finish upon **vinyl** or **hard floor** surfaces such as sheet vinyl or tile; Armstrong Flooring - Feather Edge Skirting shall be installed to the face of the wall; finishing so that the base of the skirting sits neatly upon the substrate.

Armstrong Flooring accessories should be fixed using **Solvent based (Brushable)** contact adhesive (to manufacturers recommendations) refer to [Recommended Adhesives Guide](#).

Installation to AS1884

Substrate

Armstrong Flooring accessories are suitable for installation on most internal building materials (such as concrete, timber, hardboard and rendered surfaces).

Inspection of the substrate; it shall be the responsibility of the sub-contractor to thoroughly examine the walls and doors prior to the application of vinyl sheet & accessories.

All surfaces must be dry, clean, smooth, structurally sound and free from moisture, alkali, dust, dirt, wax, oils, grease, loose paint or plaster, or any other foreign matter.

Rectification to imperfections in the surface of the substrate shall be made good prior to fixing vinyl sheet & accessories.

Feather Edge Skirting

Installation of Armstrong Flooring accessories must conform to **AS 1884**. Special attention should be paid to **AS1884 section 3.1.5 Surface Preparation**.

Set out

To achieve a straight/level finish of skirting; ensure that the desired finished height is marked at all external and internal corners. Strike a chalk-line between each point to act as a guide.

Fitting

All material should be checked in good natural light for obvious defects prior to fitting; if material has defects immediately contact your supplier.

All fitting work should be carried out before applying adhesive

Install Armstrong Flooring - Feather Edge Skirting to finish at wall/floor junction as specified ensuring that edges are straight and level.

Feather Edge Skirting can be mitred or wrapped around external corners and can be scribed and mitred or wrapped with a V-shaped notch in the toe at internal corners. Tight external corners may require a groove to be cut from the back of the skirting where the corner will be positioned at a depth of 1/4 of the material.

Install using **Solvent Based Contact Adhesive** (to manufacturers recommendations).

[Recommended Adhesives Guide](#)

1. Ensure backing of Feather Edge Skirting is clean and free of dust.
2. Brush or roll (medium nap roller) **Contact Adhesive** on to the Feather Edge Skirting backing (ensuring full coverage).
3. Ensure substrate is clean and free from dust.
4. Using the chalk line as a guide, brush or roll (medium nap roller) **Contact Adhesive** on to the substrate (ensuring full coverage).
5. Allow both surfaces to dry for 10-15 minutes until "touch dry".
6. Ensure the Feather Edge Skirting is positioned correctly and fits neatly to substrate.
7. Using the chalk line as a guide, bring the two components together and bond together by applying pressure with a hand roller over the entire area.

Caution should be taken with **Solvent Based Contact Adhesive**, as this adhesive can be highly flammable.

Maintenance

Damp wiping with a neutral cleaner (e.g. PeerlessJal Versadet) for general maintenance. A light application of liquid floor polish/finish (e.g. PeerlessJal Gemini) can be used to maintain gloss level. Solvent-based waxes or ammonia-based cleaners should be avoided.

ALL FLOORCOVERINGS, & ACCESSORIES MANUFACTURED IN AUSTRALIA AFTER 1 JANUARY 1984 DO NOT CONTAIN ASBESTOS

WARNING!

Resilient floorcoverings, adhesives and underlays manufactured in or imported to Australia prior to 1 January 1984 may contain asbestos. If it cannot be definitively established that the previous floor coverings, adhesives and/or underlay do not contain asbestos:

- you should avoid creating dust and should not sand, dry sweep, dry scrape, drill, saw, bead blast or mechanically chip or pulverise the existing floorcoverings, adhesives or underlay, and
- the previous flooring should only be removed by an appropriately licensed asbestos removal contractor.

AU: customerservices@armstrongflooring.au
NZ: customerservices@armstrongflooring.co.nz