




Gilt Edge Industries Ltd[®]

Customer Services
CHC : 03 379 7067 or AKL: 09 443 7067
Email: help@giltedge.co.nz

Technical & Sales Assistance
Email: help@giltedge.co.nz
www.giltedge.co.nz

PRODUCT DATA SHEET

6230 Carpet to Luxury Vinyl Tiles (LVTs)

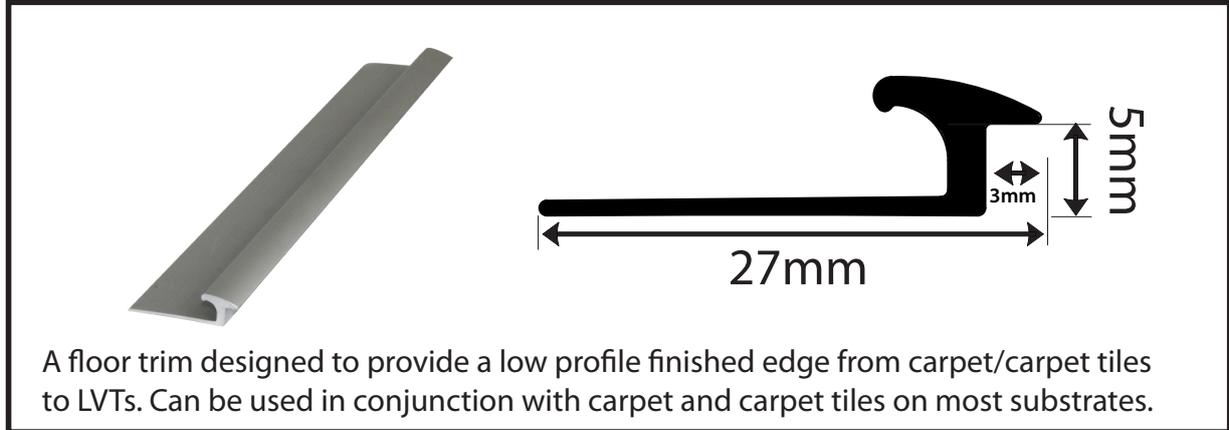

A floor trim designed to provide a low profile finished edge from carpet/carpet tiles to LVTs. Can be used in conjunction with carpet and carpet tiles on most substrates.

Product Attributes

6230 Carpet to LVT is an anodised aluminium profile designed for a transition between Carpet and up to 5mm LVTs and Vinyl.

6230 can be contoured to suit a curved interface with the floorcovering.

Suitable for use with uncovered substrates and resilient floorcoverings.

Material: Aluminium Colour: Satin Silver and Black Anodised Length: 2.44mtr.

Specification

Manufacturer: Gilt Edge Industries 110 Antigua Street, Addington Christchurch 8240

P O Box 7515 Sydenham Phone: 0800 445 833 Fax: 0800 103 649

Email: help@giltedge.co.nz

Reference Code: 6230S244 (Silver)
6230B244 (Black)

Installation

- 1) It should be ensured that all surfaces to which the profile is to be fixed are dry, flat and free from any contaminants.
- 2) Cut the profile to the size required.
- 3) Apply a bead of proprietary cartridge adhesive to the underside of the profile, then, ensuring the substrate is free from dust, firmly place the base into position. (if the profile is supplied with pre-drilled screw holes) (pre prime with Polymer 6000 primer is recommended) Place the profile in position and mark the position of the screw holes onto the substrate. Drill the substrate to a depth of 30 -35mm and insert suitable fixing plugs into the holes.
- 4) Ensure the profile cannot be disturbed while the adhesive cures.
- 5) OR Apply Gilt Edge Double Side scrim tape ensuring the substrate is dust free/clean and dry

Maintenance

A regular scheduled maintenance programme prevents build up of dirt and grease, which will reduce properties of and detract from the overall appearance of the product. Brush down the profiles using a soft bristled brush.

With clean warm water, apply a small amount of a soap-less detergent to a wet green scotch pad and gently clean the surface of the profile along it's width with fresh, clean water and dry with a dry lint free cloth.