



Gilt Edge Industries Ltd®

TECHNICAL DATA SHEET

Customer Services
CHC : 03 379 7067 or AKL: 09 443 7067
Email: help@giltedge.co.nz

Technical & Sales Assistance
Email: sales@giltedge.co.nz
www.giltedge.co.nz

Homepride Stair Rods



Improved design.

- Available for runner carpets and fully fitted carpets.
- Eight finishes: Antique, Black, Brass, Bronze, Satin Nickel, Chrome, Pewter and Ivory.



Brass



Antique



Bronze



Chrome



Satin Nickel



Black



Ivory



Pewter






Technical


The Product

- The Homepride range of stair rods are available for runner and fully fitted carpets.
- The Homepride range are available in four option sizes. See facing page for details
- Our Homepride runner bracket clearance is 14mm


Option 1

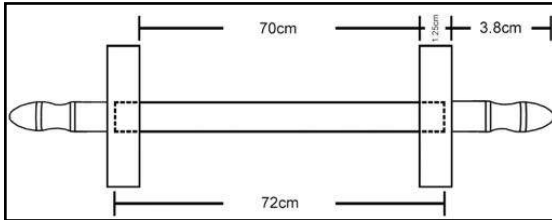


Option 2

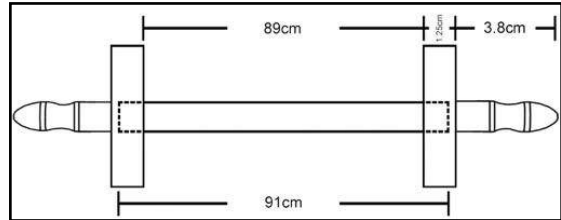

Option 3

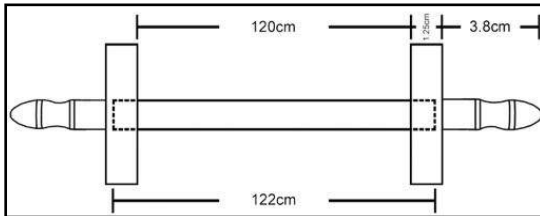

Option 4

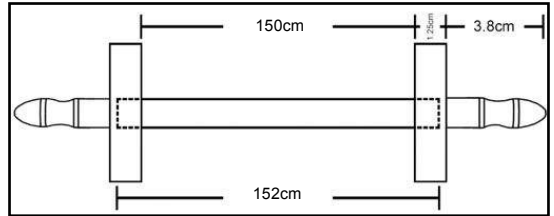


Homepride Rod For Runner Carpet.

- The brackets are supplied with number 6 screws and you must drill a pilot hole before fixing the brackets to the stair. For softwood create a 2.5mm pilot hole and for hardwood create a 3mm hole. Remember to set your power drill on a low torque setting to avoid breaking the screws.
- Fit one bracket to the tread and riser then cut the rod to size and put in place. Now fit the second bracket.

Homepride Rod For Fully Fitted Carpet.

- Depending on the width of the stair we recommend that you leave a 1 to 2 inch (2.5 to 5cm) gap between the stringboard and the tip of the rod at both sides of the staircase.

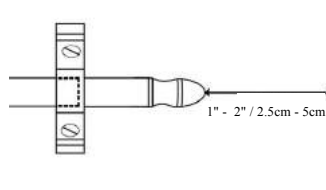

Cleaning

- We recommend using a damp cloth to keep the rods clean, any household cleaners used to clean the wood and paint work of the staircase should be applied to the cloth and not directly onto the surface of the stair, as over spray can cause a speckled tarnish on the rods. If any liquids are inadvertently spilt on the stair rods they should be cleaned immediately with a damp cloth and dried with a clean cloth.